


Title:	<b>Fuse Power-Supply LPX- LPR_Series</b>			ID:
				146
13.10.16	Response:	Model:	Author:	
		-	CMa	

## ***Fuse Power Supply PlateHotels LPX-, LPR Series***

Power of unit und disconnect unit for power prior working on the electricals of the unit.

There is a fuse located inside the power supply. To access the fuse the power supply must be opened. The fuse is located close to the connector block.

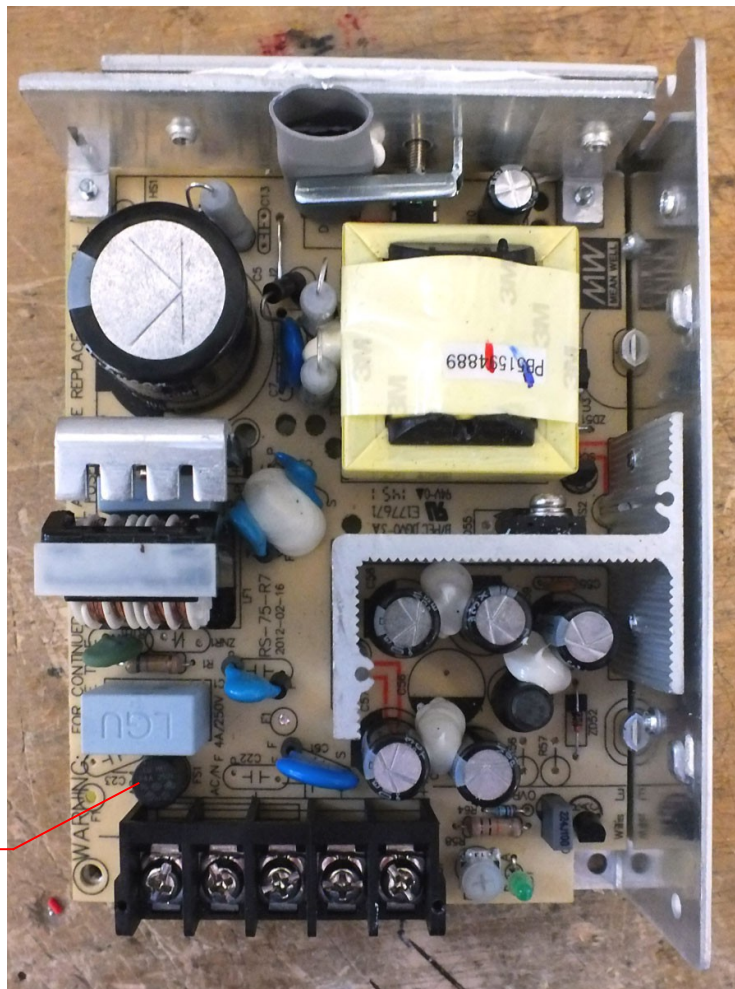

PDB mounted  
Internal Fuse  
F4A / 250V