

Title:	STX stop with Gate open during Load				ID:
	Operation				0226
Date in:		Response:	Model:	Author:	
2004-10-01		2004-10-01	-	СМа	

Q:

Problem described :

Plate on the shovel and plate on the transfer station , machine in alarm , I asked them for log code to review , which I attached in this e-mail,

After reviewing code something is not making sense.

In the log file during time Sept 30 06:26:20 they load plate location 9, from stack 1,

then at 06:26:33 they get reply from 1915 (ready 1) which is about 13 seconds , seems OK , but then at 06:26:44 they send another (1904) load commend , at this point the plate seems to be on the shovel and when it tries to get the new one I think plates collide and system stops and reports ERROR (code 04864)

I had them verify the plate BCR and the plate on the shovel was the one which was supposed to be loaded in position 9, stack 1.

What makes me very confused is that when we receive status 1915 (1) after 1904 is complete , how can the plate still be on the shovel.

I notice they do not read the plate detection sensor which we have on the shovel (st 1911, than rd 1812), so I do not know if system knew that it was not ready yet because the plate still was on the shovel ?

Anyway please look at the LOG file and get back to us with your input in the morning ASAP so we can provide some feedback

A:

The status code is 1300h (please convert to hex format. Looks that the system was unable to extend the shovel at the transfer station. Possibilities:

1 Hit something on turning out

- 2 Hits the transferstation on the plate on the transferstation
- 3 Plate on the shovel
- 4 Shovel motor broken